



## CheetahLynx™ Controller

### Quick Start Guide

**Purpose:** Steps for adding the CheetahLynx Controller to your network.

- Step 1.** Change the Lynx Controllers Network Configuration information
  - IP Address
  - Subnet Mask
  - Default Gateway
  - Primary and Secondary DNS server IP
    - All values can be changed by navigating to Start\Settings\Network Connection\Local Area Connection\
    - Click the Properties button
    - Highlight Internet Protocol (TCP\IP) item and click Properties button
    - Update the fields for your network communication
- Step 2.** Update the IP address in the hosts file with the value you used above
  - Navigate to C:\Windows\System32\drivers\etc\hosts file
- Step 3.** Add your CheetahLynx Controller IP address and server name to your DNS server (optional)
- Step 4.** Update the Administrator password on the Lynx Controller (optional)
- Step 5.** Start CheetahLynx (use shortcut on the desktop)
- Step 6.** Verify clients can connect to the Lynx Controller
  - In the URL line of a Web Browser type `//cheetahlynx:9090`
- Step 7.** Add the Lynx Controller IP address to your NM Access table in the Cable Modem Config file (see EOL Users Guide)
- Step 8.** Update the Discover Configurator to include your EL network range

Jan. 2, 2010  
Document #  
050-0300  
Rev A



**Cheetah Technologies, L.P.** | 381 Mansfield Ave., Pittsburgh, PA 15220  
Technical Support: **866-944-1482** or [cheetahsupport@cheetahtech.com](mailto:cheetahsupport@cheetahtech.com)  
Sales: **412-923-3486** or [sales@cheetahtech.com](mailto:sales@cheetahtech.com)

.....  
[www.cheetahtech.com](http://www.cheetahtech.com)

January 2, 2010

© 2010 Cheetah Technologies, L.P. All Rights Reserved.

PROPRIETARY - CHEETAH TECHNOLOGIES, L.P. AND AUTHORIZED CLIENTS ONLY